

Basic setup

Setting

- Factory Reset
- Date & Time
- Ringtone
- Auto Power Off
- Motion Detection
- Auto-Photograph
- Formatting
- Language

Date & Time

Set Date

YY / MM / DD

2014 / 10 / 14

18 : 00 : 00

Ringtone

Ringtone Setting

- High
- Low
- Off

Auto Power Off

- 10s
- 15s
- 20s
- Never

Motion Detection

Camera

- 5s Video
- 10s Video

Auto-Photograph

- On
- Off
- 10s Video

Formatting

Warning: Deletes images from SD card

OK

Cancel

Language

- English
- Deutsch
- Espanol
- Francais

NB: motion button must be on

Visitors

a)

b)

Album

3s.

2s.

Delete

- This file
- All
- Cancel